

## Tow hook fitting and operating instruction AUDI A2 (5D) (02/2000 - r.)

Nr kat. A-072

### DESTINATION

Tow hook for **Audi A2 (5D)** is designed for towing a trailer. This part is certified with safety mark "B" issued by PIMOT (Polish facility granting certifications).

### Assembling conditions:

Tow hook **A-072** can be used and operated in a car with proper technical conditions of body elements. These elements can not be mechanically damaged. Tow hook must be assembled and operated according to this instruction.

### Operating conditions:

Tow hook **Audi A2 (5D)** includes a rating plate describing correct and safe loads of the hook:

**WR** - max. permissible load of a trailer,

**WM** - max. permissible load of a car

During operating individual elements of the tow hook should be kept in a proper technical conditions and protected from corrosion. The trailer must be linked with an elastic joint with proper durability (cord chain) while towing. It is necessary to check periodically bolt joints during operating the ball rod. If screws are eased it is necessary to screw them down.

### Assembling instruction:

The ball hook for **Audi A2 (5D)** is made up of the following elements:

1. Tow bar mainframe	- 1 piece	6. Bolt M12x30	- 6 pieces
2. Tow ball with support	- 1 piece	7. Spring washer 8,2	- 6 pieces
3. Electrical plate	- 1 piece	8. Spring washer 12,2	- 6 pieces
4. Flat bar with nut M12	- 2 piece	9. Flat washer 8,5	- 6 pieces
5. Bolt M8x30	- 6 piece		

In order to mount the ball hook **Audi A2 (5D)** you have to obey the instruction below.

1. Rear bumper cutting is required (in the bottom part).
2. Dismantle the tow bar into kit-form elements.
3. Dismount the rear bumper and its strenghtening.
4. Put (1) to the back strip and screw using (5), (7) and (9).
5. Place (4) in the chassis frame members through the holes in the tow bar side arms.
6. From the bottom of chassis frame members attach (1) using (6), (8) and previously placed flat bars (4).
7. Make an undercut of the bumper.
8. Attach (2) to (1) using (6), (8), screwing (3) on the left side of (2) at the same time.
9. Check if all fixing bolts and nuts are screwed hard enough.


**Obeying this instruction assures correct montage and the tow hook operating in Audi A2 (5D).**

After assembling of the ball hook **Audi A2 (5D)** you have to get entry in cars **registration book** in a quality control station.

### CAUTION :

All mechanical damages of ball hook excludes its longer exploitation . Damaged ball hook **cannot be repaired**. The tow hook user should check bolt's joints periodically during operating time. In case of braking the rules of montage or unproper usage manufacturer **do not take responsibility** for arised damages .

### MONTAGE DIAGRAM :

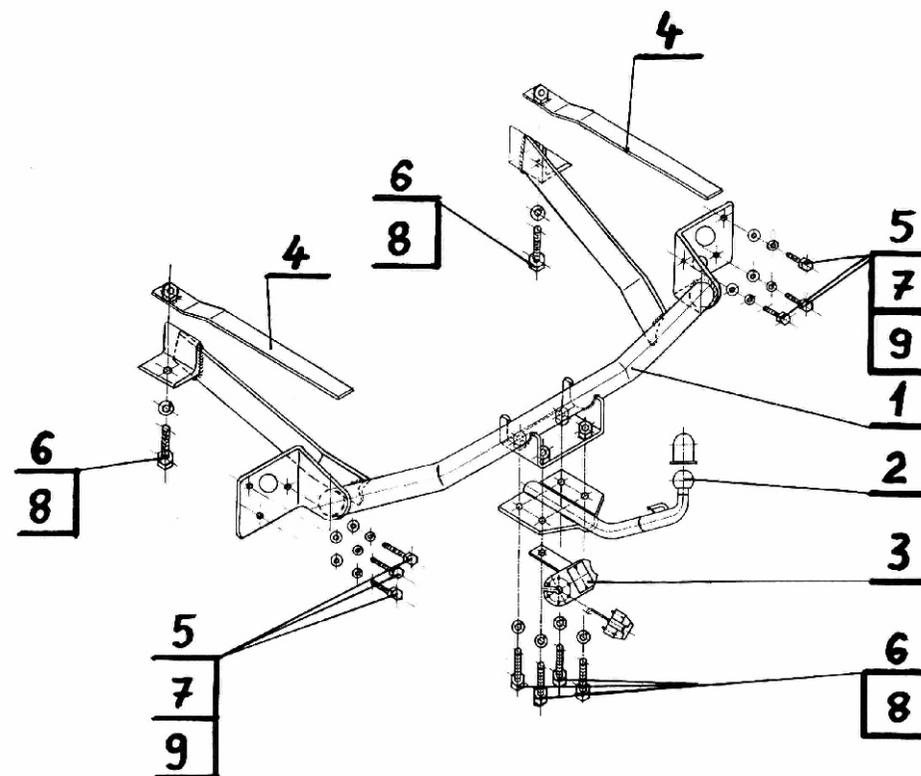

### NOTE :

Bunch of wires is not included (in total price).